


MS-157RF User Manual

Package contents

Wireless Optical Mouse
USB receiver
2 AAA alkaline batteries
User manual

Installing the battery (Diagram 1)

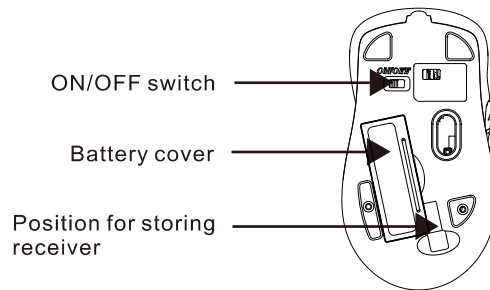

(Diagram 1)



(Diagram 2)

Whenever new batteries are installed, make sure that they are fresh 1.5V AAA batteries.

A) Remove the battery cover.

B) Insert two AAA batteries into the battery compartment, make sure to properly orient the positive (+) and negative (-) ends as specified by the marks in the battery compartment. Replace the battery cover and make sure it is locked.

C) Switch on the mouse, the LED in bottom of mouse will blink.

Installing the receiver (Diagram 2)

The codes of receiver and mouse were successfully connected in factory. User can directly use the complete set of products, no worry about the code connecting.

A) Insert receiver into USB port of PC, the computer system will automatically detect it and prepare it for full operation.


B) The mouse may use then.

If the user wrongly operates, please redo the above operating procedures.

"ON/OFF" switch (Diagram 1)

Without using the mouse, user may turn off it by "ON/OFF" switch for saving battery power.

Description of keys and DPI adjusting

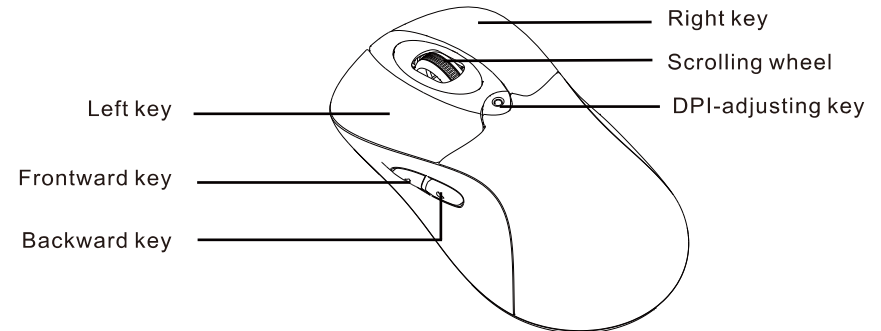

A) Using "DPI-adjusting key", the resolution of mouse can be switched between 800DPI and 1600DPI in turn. That LED light in "DPI-adjusting key" blinks slowly indicates 800DPI and fast 1600DPI.

B) Backward and Frontward keys for your easily navigating forward and backward on the Internet

Low-voltage alarming function

When batteries have been used for some time and discover the LED light in "DPI-adjusting key" blinks automatically, which reminds you that batteries' voltage is becoming low, suggested you replace the batteries with new ones.

System requirements

Windows ME, 2000, XP or Vista

Specifications and functions

1. Super mini receiver can be stored at bottom for easy carrying
2. 2.4GHz, freely operating within 10 meters
3. Wireless carrier frequency: 2,402MHz-2,480 MHz
4. 16 wireless working channels, automatic frequency jumping
5. Power ON/OFF function
6. Low-voltage alarming function
7. Resolution: 800DPI and 1600DPI adjustable